
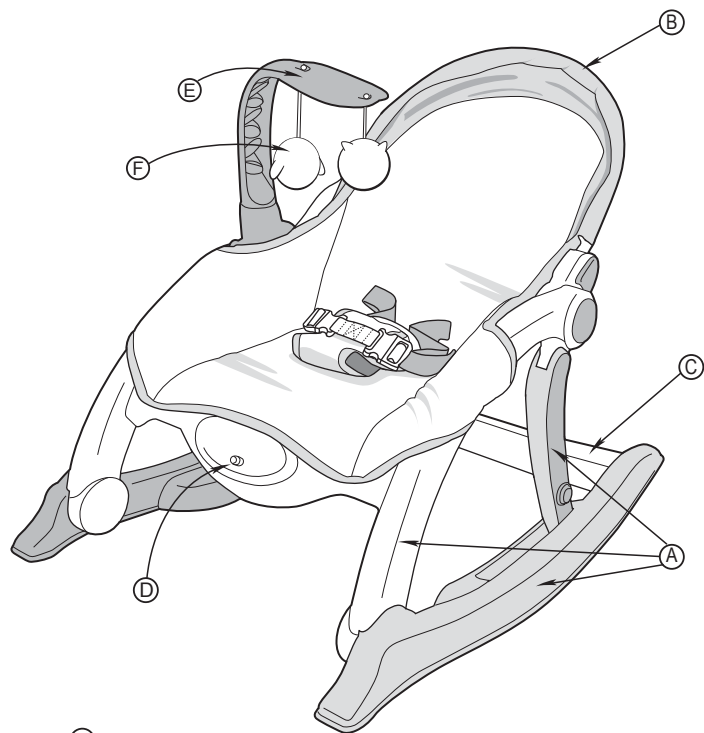
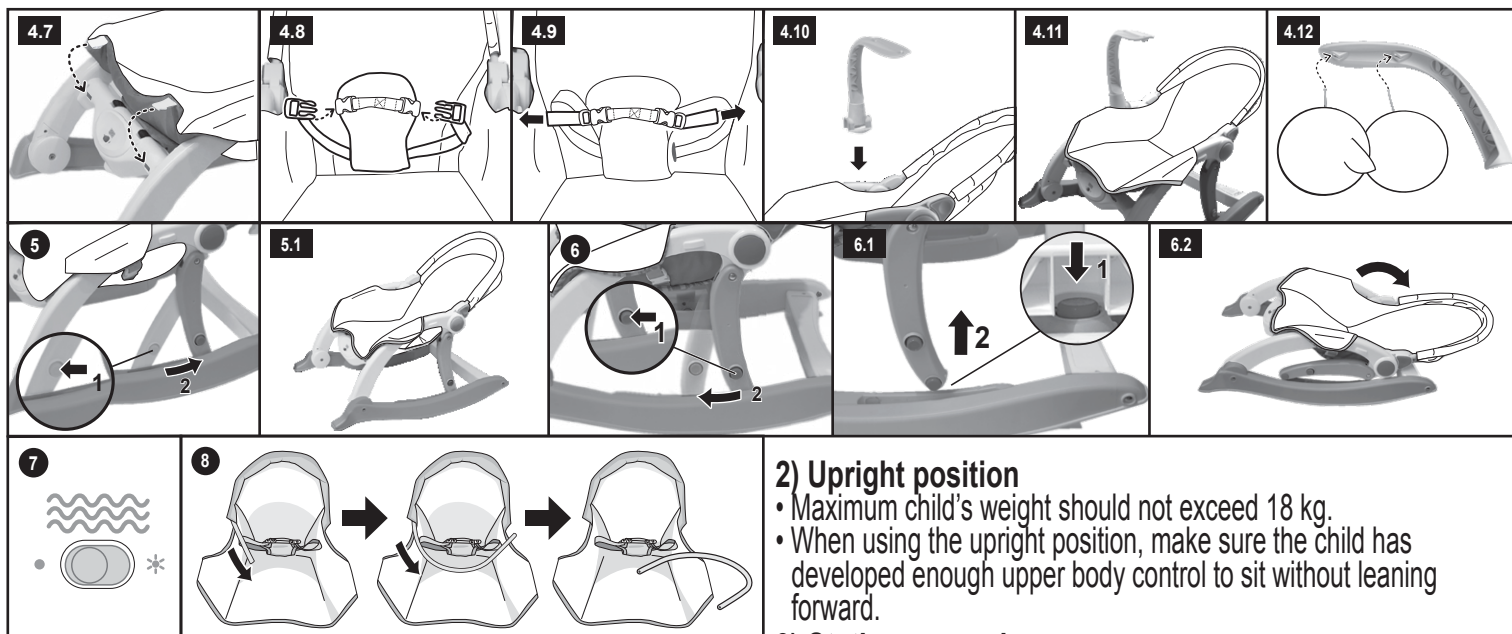


0-36M

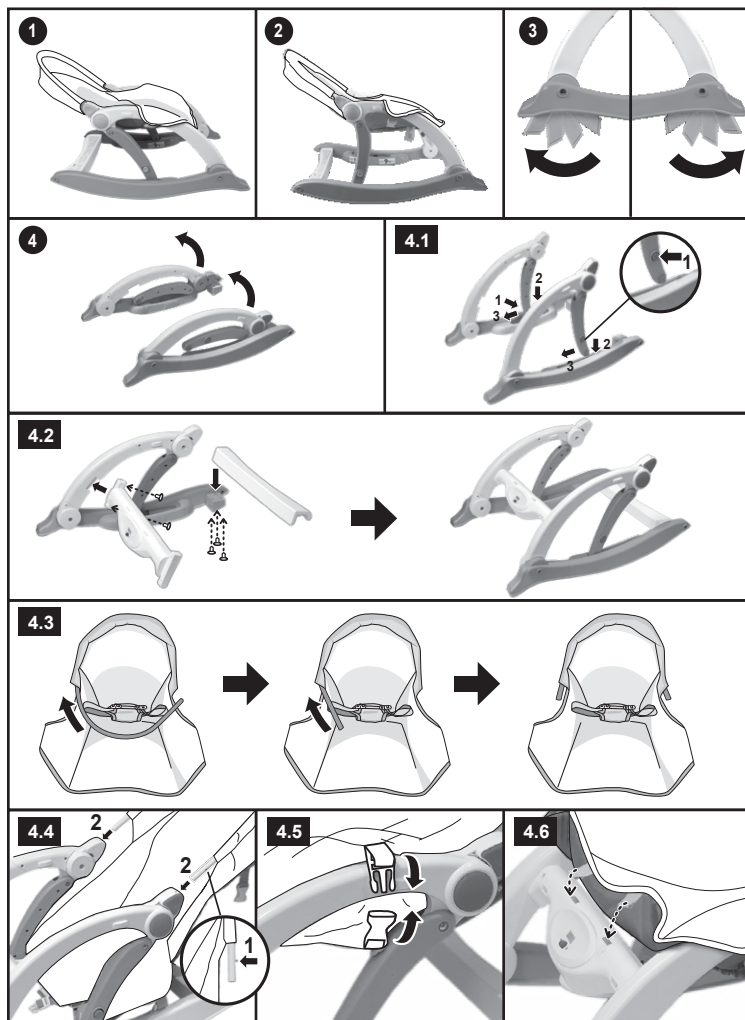

EN

Parts:

- (A) Seat side stands (D) Front bar with soothing vibrations function (F) Soft hanging toys
(B) Seat pad with back support tube (G) Screws (10 pieces)
(C) Crossbar (E) Swivel toy bar

1) Reclined position

- Maximum child's weight should not exceed 9 kg.
- Never use the reclined position once your child can sit up unaided.
- Always use the restraint system. Ensure to tighten each waist belt, so that the restraint system is snug against your child.

2) Upright position

- Maximum child's weight should not exceed 18 kg.
- When using the upright position, make sure the child has developed enough upper body control to sit without leaning forward.

3) Stationary mode

Flip out kickstands to go from cradle mode to stationary mode.

4) Assembly for reclined position

4.8 - 4.9) Ensure to tighten each waist belt, so that the restraint system is snug against your child.

5) Change to upright position**6) Fold for portability and storage****7) How to operate the soothing vibrations Off /****Soothing vibrations**

Slide the switch to the right to turn on soothing vibrations. To turn it off, slide the switch to the left.

8) Care and Cleaning

- The seat pad: Take out the back support tube before washing. Hand wash in cold water. Do not bleach. Do not iron. Air dry.

- The frame and swivel toy bar: Wipe clean with a damp cloth, mild cleaning solution if needed. Rinse clean with water to remove any residue.
- Soft toys: Hand wash in cold water, no bleach. Air dry.

⚠ WARNING!

CHOKING HAZARD – Assembly kit contains small parts. Adult assembly required.

⚠ WARNING!

FALL HAZARD: Children have suffered head injuries falling from rockers.

- **ALWAYS** use restraints until child is able to climb in and out of the product unassisted. Adjust to fit snugly.
- **NEVER** lift or carry baby in rocker.
- **STOP** using product when baby has reached 9 kg (Reclined position) or 18 kg (Upright position).
- **Stop** using the product (Reclined position) when the child starts trying to sit up.

• The upright position is only for children who have developed enough upper body control to sit up without tipping forward.

• **ALWAYS** place rocker on floor. Never use on any elevated surface.

SUFFOCATION HAZARD: Babies have suffocated when seats tipped over on soft surfaces.

- **NEVER** use on a bed, sofa, cushion, or other soft surface.
- Stay near and watch child during use, this product is not safe for unsupervised use or unattended sleep.

Prevent crushed or amputated fingers.

Make sure latch is secure.

IMPORTANT!

- Read all the instructions carefully before use of the rocker.
- Keep instruction for future use.
- Read the assembly diagrams carefully before set up the product.

IMPORTANT: Retain these instructions for future reference.

Adult assembly requirements

Caution! To ensure your child's safety:

- Assembly to be carried out by a competent adult only.
- During assembly children should be kept away from the product due to possible risk of injury.
- Do not use this item if any components are missing or damaged.
- Do not use it until it has been fully assembled and make sure it is assembled correctly.
- Phillips type screwdriver required for assembly (Not included).

IMPORTANT! KEEP FOR FUTURE REFERENCE

⚠ WARNING!

- Never leave the child unattended.
- Stop using the product when the child starts to stand up.
- Never let the child sleep in this product. This product does not replace a cot or a crib. Should the child fall asleep, then it should be placed in a suitable cot or crib.
- It is dangerous to use this reclined cradle on an elevated surface, e.g. a table.
- Always use the restraint system.
- Never use the toy bar to carry the reclined cradle.
- Never use the product as an infant carrier or car seat.
- The maximum weight of the child for which the reclined cradle is intended is 9 kg.
- This reclined cradle does not replace a cot or a bed. Should your child need to sleep, then it should be placed in a suitable cot or bed.



- Do not use the reclined cradle if any components are broken or missing.
- Do not use accessories or replacement parts other than those approved by the manufacturer.

Instructions of use and CAUTION:

- This product is suitable for children in the age range of children for which the product is designed (0 – 3 years).
- Folding and unfolding this product only be carried out by adult.
- Ensure that fingers and legs are clear of all adjustments when adjusting this product. Make sure child is not sitting in the product.
- Before each use, adult should check the product carefully for signs of damaged or missing parts.
- Do not use this rocker if it is damaged or broken and keep out of reach of children.
- Regularly check all fastenings to ensure that they properly tightened.
- This product must be used under adult supervision.
- Never use the product other than those illustrated in the operating instruction.
- To avoid overloading, child's mother or older sibling should not sit and play with the child on the rocker. This product must only be used by one child at a time.
- Never attach the hanging toys with arm bracket to a crib, cot or playpen.
- Do not move or lift this product with the baby inside it.

BATTERY INSTRUCTIONS

Battery installation

- Make sure the toy is switched OFF (if applicable).
- Use a screwdriver to open the battery cover located from the back/bottom of the toy.
- Install the required batteries according to the diagram inside the battery compartment. Alkaline batteries are recommended.
- Replace and secure the battery cover.
- Batteries must be installed and replaced by an adult.

Battery notice

- If for some reason the program/electronic activity stops working or malfunctions, it's time for an adult to change a new set of batteries.
- Non-rechargeable batteries are not to be recharged.
- Rechargeable batteries are only to be charged under adult supervision.
- Rechargeable batteries are to be removed from the toy before being charged (if removable).
- Do not mix old and new batteries (if applicable).
- Do not mix alkaline, standard (carbon zinc) or rechargeable batteries (if applicable).
- Different types of batteries or new and used batteries are not to be mixed (if applicable).
- Batteries are to be inserted with the correct polarity (+ and -).
- Exhausted batteries are to be removed from the toy.
- The supply terminals are not to be short-circuited.

This sheet contains important information.

Please keep all information for future reference.



This symbol indicates that the product is not to be disposed of in household waste and should be collected separately. Contact local authority for recycling & collection information.

Printed in China

Winfat Industrial Company Limited
Room 903-904, 9/F, East Ocean Centre,
98 Granville Road, Tsim Sha Tsui East,
Kowloon, Hong Kong