

3-in-1 Musical  
Booster Seat



EN

**IMPORTANT! KEEP FOR FUTURE REFERENCE**  
Please read all the instructions carefully before use the product and keep it for future reference. Read the assembly diagrams carefully before set up the product.

**Adult assembly requirements**

Caution! To ensure your child's safety, this product must be assembled by an adult. Do not use it until it has been fully assembled and make sure it is assembled correctly.

**Diagram**

- |                       |                            |  |
|-----------------------|----------------------------|--|
| ① Booster seat        | ⑥ Holders for the straps   | ⑪ Removable tray                               |
| ② Fold-out legs       | ⑦ Seat back support        | ⑫ Lock for the seat back and seat back support |
| ③ Bottom straps       | ⑧ Foldable seat back       | ⑬ Swivel knobs to hold the legs                |
| ④ Back straps         | ⑨ Removable activity board |  |
| ⑤ 3 point safety belt | ⑩ Battery compartment      |  |

**Assembly:**

- |                              |  |   |
|------------------------------|--|---|
| A) Floor Seat/Positioner     | C) Booster Snack Time AND Table Booster Seat | E) Folds for Storage and Easy Portability |
| B) Adjusting the Seat Height | D) Install Food Tray for Booster Snack Time  |   |

**⚠ WARNING**

**FALL HAZARD:** Children have suffered head injuries, including skull fractures, after falling with, falling while in, and falling from booster seats and floor seats.

• **Stay near and watch** your child during use. **ALWAYS** keep child in view while in product. • **NEVER** lift or carry child in the product. • Prevent serious injury or death, do not use in motor vehicles.

**Floor Seat/Positioner Use:** • Use **ONLY** on the floor. • **NEVER** use on an elevated surface. • **ALWAYS** use restraints. Adjust to fit snugly. • **STOP** using when the child can climb out or walk. **DROWNING HAZARD:** Infants have drowned when floor seat has been placed in a bath tub or pool. • **NEVER** use in or near water.

**WARNING:** Use **ONLY** with a child that is able to hold their head up unassisted.

**Booster Seat Use:** • Until child is able to get in and out of booster seat without help (about 2½ years old), the child should be secured in the booster seat at all times by the restraining system. • Check that booster seat is **securely attached** to adult chair before each use. • **Always use restraints** until child is able to get in and out of booster seat without help. Adjust to fit snugly. • The tray is not designed to hold the child in the chair. • Always secure to the adult chair using the bottom and back attachment straps. • **Never** allow child to **push away from table**. • Never use on a seat that does not have a seat back. • Do not use on an adult chair unless at the seat bottom is at least 15" (38 cm) wide and 14" (35 cm) deep, and the seat back is at least 16" (40 cm) tall. **WARNING:** Use this product only for children capable of sitting upright unassisted.

**WARNING!**

- Never leave child unattended and without supervision.
- Always use the restraint system and ensure it is correctly fitted.
- Always use the chair attachment system and ensure it is correctly fitted before use.
- Always check the security and the stability of the booster seat on the adult chair before use.
- Do not use this booster seat on stools or benches.

**IMPORTANT:**

- Read all instructions and labels before using the booster seat.
- Prevent serious injury or death from sliding out, falls or tipping over, by following all instructions properly.
- Before assembly and each use, inspect this product for damaged hardware, loose joint or missing parts. DO NOT use if any part is broken, torn or missing.
- This booster seat is designed for use with adult size chairs that have flat smooth sitting and back surfaces only.
- This product is to be used **ONLY** as a booster seat. It is not intended for use as a bathing seat, step stool, car seat, or for any other purpose.
- Ensure that the adult chair with the chair mounted seat is placed in a position where the child is unable to use its feet to push against any other structure as this can cause the tip over of the adult chair supporting the chair mounted seat.
- Check the surface and stability of the floor and the chair before fitting the booster seat.
- **NEVER** use the booster seat on a table top, swivel chair, or any other chairs where the straps cannot secure it properly.
- **Floor Seat/Positioner Mode:** This product is intended for children at least 6 months of age, able to hold their head up unaided, and under 15kg (33lbs).
- **Booster Seat Mode:** This product is intended for children able to sit unaided (minimum 6 months) and up to 36 months or a maximum weight of 15 kg (33 lbs).
- Not to use accessories or replacement parts other than those approved by the manufacturer.

**CARE AND MAINTENANCE:**

- The booster seat with attached straps: Wipe clean with a damp cloth, mild cleaning agent if needed. Rinse clean with water to remove any residue. Do not use bleach. Do not use harsh or abrasive cleaners.
- The tray is top rack dishwasher safe (or use the bottom rack - without using the heated drying cycle).
- The tray is not intended to be used in contact with food or drink.
- Activity board: Wipe clean with a dry cloth.

Winfat Industrial Company Limited  
Room 903-904, 9/F, East Ocean Centre,  
98 Granville Road, Tsim Sha Tsui East,  
Kowloon, Hong Kong

0301-241201-P6-WF16-001

